

# **EM-FECS(B) - Evaluation Module for FECS-series Sensors**

## **Description:**


The EM-FECS(B) evaluation module is designed to perform the testing and evaluation of the three-electrode electrochemical gas sensors in the FECS-series. Since the output voltage (Vout) corresponding to the sensitivity characteristics can be obtained, the characteristics of the FECS sensor can be easily evaluated.

#### Features:

- \* Compatible with all FECS-series sensors
- \* Converts sensor output current to voltage output
- \* Selectable load resistors dependeing on sensor model
- \* Anti-polarization circuit during power OFF period

## **Operation:**

The FECS-series sensor is placed into the sensor socket on the EM-FECS(B). If target gas is present, the output current generated from the FECS-series sensor (\*1) is converted into output voltage. A linear relationship exists between output voltage and target gas concentration. By measuring in advance the output voltage in a known target gas concentration, that gas concentration can be calculated from the measured output voltage values. (\*2)

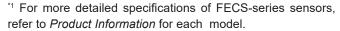

<sup>&</sup>lt;sup>\*2</sup> The main function of this module is to simply convert sensor output current into voltage output without temperature compensation.




\*Sensor not included

## **Specifications:**

| Item                      | Specification   |
|---------------------------|---|
| Model No.                 | EM-FECS(B)  |
| Product name              | Evaluation module for FECS-series sensors   |
| Target gases              | CO (FECS40-1000)<br>NO (FECS41-250)<br>NO2 (FECS42-20)<br>SO2 (FECS43-20)<br>NH3 (FECS44-100/200/1000/5000)<br>Cl2 (FECS45-10)<br>H2S (FECS50-100)                        |
| Input voltage range (VIN) | 5.0 ± 0.2V DC   |
| Current consumption       | <2.0mA  |
| Output voltage (Vout)     | - 1.00±0.05V DC in zero air<br>[FECS40-1000, FECS41-250,<br>FECS43-20, FECS50-100, FECS44-<br>100/200/1000/5000]<br>- 2.50±0.05V DC in zero air<br>[FECS42-20, FECS45-10] |
| Operating conditions      | 0~60°C, <95%RH (no condensation) For more details of operating conditions, refer to Product Information for each model.   |

### **Dimensions:**

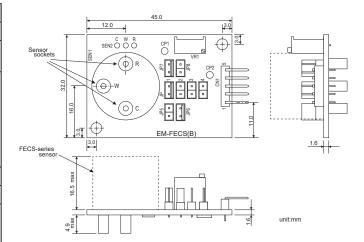


\*FECS-series sensor is to be put in the sensor socket as shown in the above photo.

\*Suggested female connectors mating to the 5-pin connector (JST MB5P-90S):

JST XHP-5P or JST 05JQ-BT



## **Schematic Diagram:**

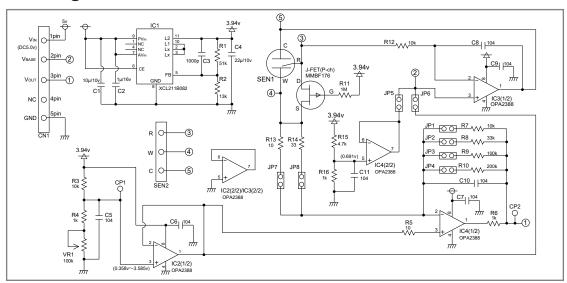

## Jumper Pin and Base Voltage Settings(\*3)

| Sensor Model<br>No. |                  | Target gases     | Amplifying factor for I-V conversion |               | Bias voltage  |               | Base voltage | Volume<br>adjustment   | Recommended load resistor $(\Omega)$ |       |                           |     |    |
|---------------------|------------------|------------------|--------------------------------------|---------------|---------------|---------------|--------------|------------------------|--------------------------------------|-------|---------------------------|-----|----|
| FECS40-1000         | СО               | Carbon Monoxide  | JP1                                  | ID1 40,000 a  | JP6           | -             | 1.00V        | Noned                  | JP7                                  | 10    |                           |     |    |
| FECS41-250          | NO               | Nitric Oxide     | JP1   10,000 x                       | 10,000 X      | JP5 +300mV    | 1.00 V        | No need      | JF7                    | 10                                   |       |                           |     |    |
| FECS42-20           | NO <sub>2</sub>  | Nitrogen Dioxide | JP3 100,000 x                        | JP3 100,000 x | JP3 100,000 x | JP3 100,000 x | 3 100,000 x  |                        |                                      | 2.50V | Necessary <sup>(*4)</sup> | JP8 | 33 |
| FECS43-20           | SO <sub>2</sub>  | Sulphur Dioxide  |                                      |               |               |               |              |                        |                                      |       | JP7                       | 10  |    |
| FECS44-100          |                  |                  | JP4<br>JP3                           |               | — JP6         |               | 1.00V        | No need  Necessary(*4) | JP8                                  | 33    |                           |     |    |
| FECS44-200          | NH3              | Ammonia          |                                      | 200,000 x     |               | -             |              |                        |                                      |       |                           |     |    |
| FECS44-1000         | INITI3           | Ammonia          |                                      | 100,000 x     |               |               |              |                        |                                      |       |                           |     |    |
| FECS44-5000         |                  |                  | JP2                                  | 33,000 x      |               |               |              |                        |                                      |       |                           |     |    |
| FECS45-10           | Cl2              | Chlorine         | JP4                                  | 200,000 x     |               |               | 2.50V        |                        |                                      |       |                           |     |    |
| FECS50-100          | H <sub>2</sub> S | Hydrogen Sulfide | JP1                                  | 10,000 x      |               |               | 1.00V        | No need                | JP7                                  | 10    |                           |     |    |

<sup>&</sup>lt;sup>\*3</sup> Jumper pins are connected to JP1, JP6 and JP7 respectively at time of factory setting.

#### Pin connections:

| Pin No. | Name  | Description         |  |  |  |  |
|---------|-------|---------------------|--|--|--|--|
| 1       | Vin   | Input voltage       | 5.0±0.2V DC                            |  |  |  |
| 2       | VBASE | Base output voltage | 1.00V±0.05V at time of factory setting |  |  |  |
| 3       | Vouт  | Output voltage      |  |  |  |  |
| 4       | -     | No connection       |  |  |  |  |
| 5       | GND   | Ground              |  |  |  |  |

Sensor output current Is (µA) is calculated from output voltage Vout (V) between Pin #3 (Vout) and Pin #5 (GND) using the following formula:

Is= ((Vout[Gas] - Vout[Air]) / I-V conversion amp. factor) x 106

where: Vout[Air] : sensor output voltage in zero air Vout[Gas]: sensor output voltage in target gas

Example: When output voltage of FECS 50-100 (typical sensitivity of 0.7µA for H2S) are as follows:

\* The calculated Is value corresponds to the sensor output in around 100ppm H2S.

#### FIGARO USA, INC.

5400 Newport Drive, Suite 19, Rolling Meadows, IL 60008 Phone: (847)-832-1701

URL: www.figarosensor.com



Before purchasing this product, please read the Warranty Statements shown in our webpage by scanning this QR code.

https://figarosensor.com/pdf/Figaro\_USA\_Sales\_T&C.pdf

<u>Caution:</u>
This module is designed for evaluation of the FECS-series sensors only. Please do not use this module for any other purpose.

<sup>&</sup>lt;sup>4</sup> Base voltage adjustment method: Please adjust base voltage to 2.5V by VR1 while measuring the voltage value between VBASE (Pin 2) and GND (Pin 5).